

Instruction Manual

Auto-learning Code Wireless Door Chime

SKU: O00QH-0865

Accessories List:

- 1 x Receiver
- 1 x User Manual
- 1 x 3 volts CR2032 battery for transmitter
- 2 x Transmitter
- 1 x Double-sided adhesive

Technical Specification:

- Frequency: 433.92MHz+100KHz
- Modulation Type: ASK
- Ring Volume: >85dB(within 0.5m)
- Channel space: 1 million sets of auto-learning codes
- Receiver bandwidth: $\pm 180\text{KHz}$
- Reception Sensitivity: $> -80\text{dBm}$
- Transmitting power: $< 10\text{mW}$
- Power consumption: Receiver: $< 0.3\text{W}$; Transmitter: standby: $< 5\mu\text{A}$ working: $< 10\text{mA}$
- Power Supply: Receiver: AC 110V; Transmitter: DC 3V (CR2032)
- Operating Range: $> 150\text{m}$ (in the open air)

 
Note: Each receiver can be configured with the same or different tones, you can set two different melodies for the two chimes!

Set up: A: Press the Auto-learning Code Button for 30 seconds until it starts flashing and making sounds.

B: Next choose melody by pressing Melody Selector to choose your favorite one.


C: Then again press the Auto-learning Code Button for 30 seconds until it starts flashing, which means the new melody has been matched successfully!

Names for Parts:

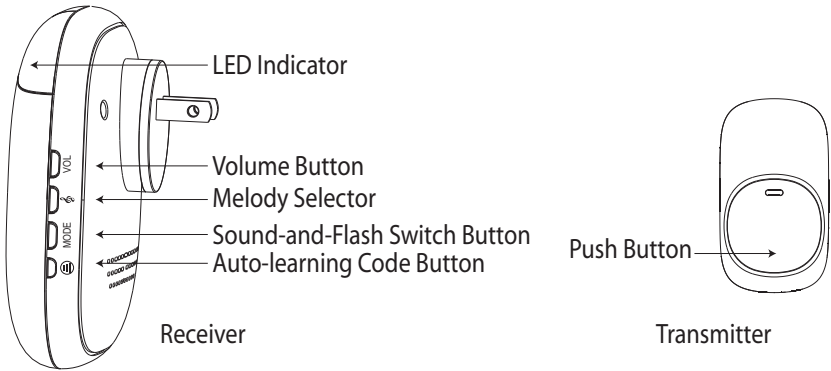


Transmitter Installation:

 - Open the Transmitter by pushing in the interface located at the bottom with a flat screw driver.
- Place the CR2032 battery (included).

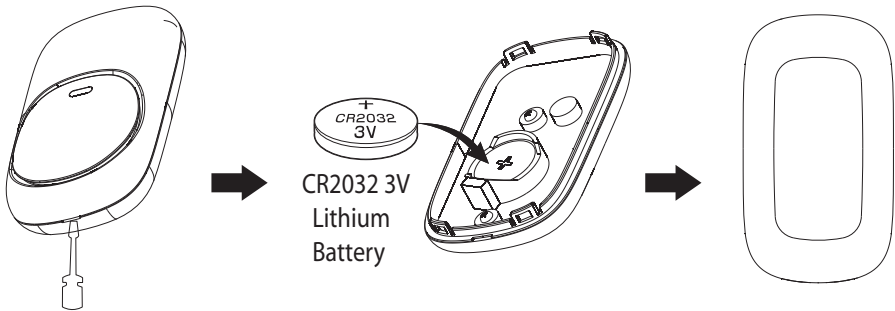


 - Stick the Transmitter on the wall or the door with double-sided adhesive tape.

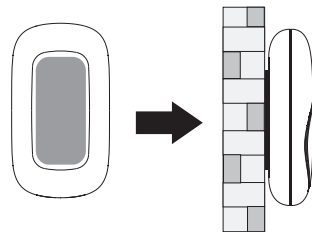


Plug-in Receiver Installation:

 - Plug the Receiver into any socket of AC110V power.

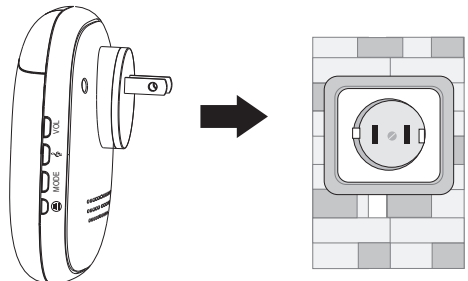

Receiver Installation:

 - Drill two holes on the wall at your required height. The holes are about 6mm in diameter. The distance between the two holes should be about 75mm. Then insert two wall plugs (included) into the holes. After that, insert two screws (included) into the wall plugs. Be noted that you should not insert completely the screws into the wall plug, but keep a suitable length out of the wall surface, which is to hold the receiver. Finally you can hang the receiver.

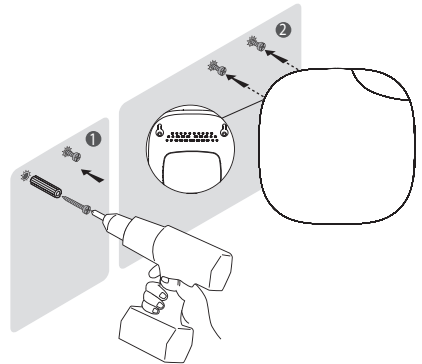

Important Note:

- If you do not plan to use the device for a long time, such as at a vacation, please remove the battery from Transmitter, then put them in a safe place.
- Improperly using a battery may cause it to leak and damage nearby items, and can create the risk of fire and personal injury. Batteries should not be left in an area where the children can reach them as they may pose a choking hazard.
- Recycle used batteries following environmental protection practices.

Functions Instruction

1. Plug the Receiver into any socket of AC 110V power, then open the transmitter and place the battery as shown in the diagram.
2. Press the auto-learning code button on the side of the Receiver and hold for 2 or 3 seconds, A "beep" sound comes out and the LED indicator light will lit. Then press the push button on the Transmitter unit once. The Receiver will sound to indicate that new operation code is registered and memorized. Thus the Transmitter works successfully with the Receiver. Maximum 60 codes can be matched and saved in the receiver within 10 seconds. Press the button once can only match one transmitter. If there is no code matched and saved within the 10s, the receiver will automatically exit and there will be two "beeps".
3. If you want to add Receivers, you just need to plug the Receiver into any socket of AC 110V power. Then operate in the same way as step 2.
4. There is a melody selector located on the side of the Receiver (see diagram).
Selectable Tone: Total 36 melodies available.
Note: You must select the desired ring first, then match the transmitter. You could use different music to distinguish visitors in different position. If you want to change ring tones, you must delete all the information saved in the receiver and reset.
Press the melody selector button and hold for 5 seconds, you can delete all the information within the receiver. At the same time, the LED indicator light will lit.

5. There is also a volume button on the side of the Receiver (see diagram). Press it to adjust the sound volume to be high, medium and low.
6. There is a Sound and Flash Switch Button on the side of the receiver. Press this button for three options, working only with sound, only LED flash, sound and LED flash:
- A. If a "beep" sound comes out and the LED indicator does not light. the Receiver will work only with sound
 - B. If a "beep" sound comes out and the LED indicator light, the Receiver will work with sound and LED flash
 - C. If the LED indicator light without "beep" sound, the Receiver will work only with LED flash.

Notes:

If the Receiver sounds for no reason during the digital code setting, it is indicated that it has been interfered by other similar Doorbell nearby, reset the auto-learning code as per point 2 above.

IMPORTANT: PLEASE KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE WHEN REPLACING BATTERIES

1byone Products Inc.
2313 E, Philadelphia Street, Unit M, Ontario, CA 91761
www.1byone.com